
130*145mm

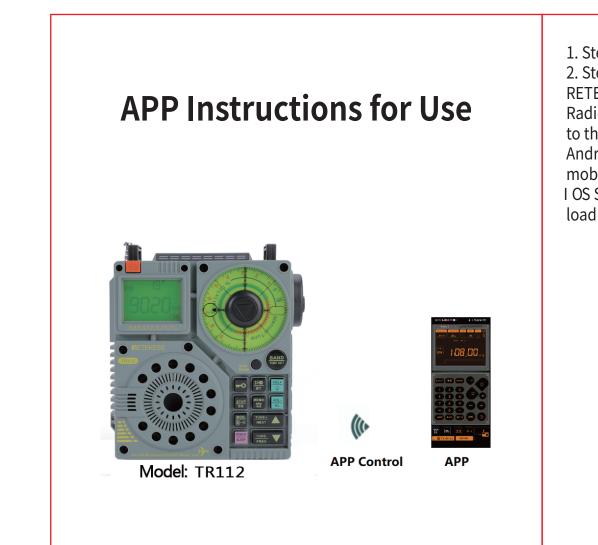

1. Step 1: Turn on RETEKESS-TR112 radio 2. Step 2: Download the APP (if you have already had our RETEKESS-TR111 and have already downloaded the APP software Radio-C, there is no need to download it again. You can connect to the APP by clicking the name RETEKESS-TR112-BLE) Android System :Please scan the following QR code using your I OS System Go to "App Store" and search "Rad o CT" to down-




Download APP QR code on Android

Radio-c


Application Permission ⊘ No risk found 3. Click the APP icon on mobile desktop Click the symbol on bottom right of APP interface → Click "Yes" → Click the symbol on bottom right again → Click RETEKESS-TR112-BLE → Successful

install" \rightarrow Installation complete, click "Open the APP" \rightarrow APP



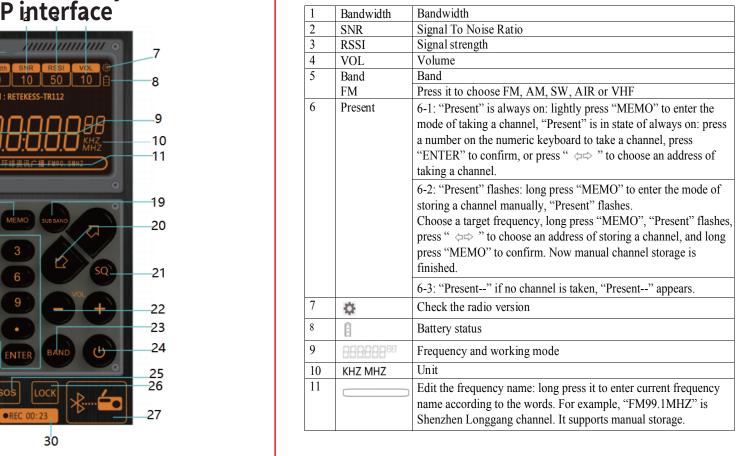

		No.	
1 2 3 4		12	
Radio c villinumum o 7			
/FM 200 10 50 10 $\hat{\mathbb{H}}$			
Model: RETEKESS-TR112			
	-	13	_
10 KHZ ———————————————————————————————————	_	14	
19			
USIC MEMO SUBBAND		15	
2 3 SQ 21			
- Val			
22			
23 24 24 24			
TE SCAN ENTER BAND 425	-	16	
sos Lock 26		17	
Time Service •REC 00:23			
29 30			
5			

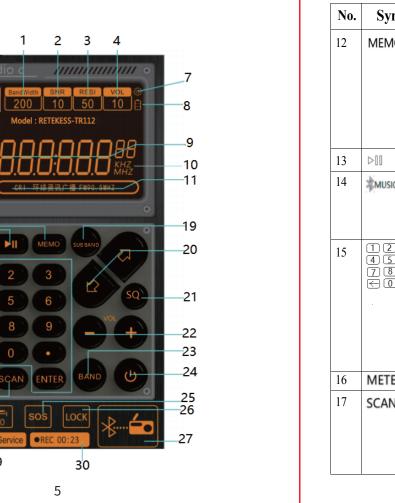

Description of function

12-1: Take a channel: lightly press it to enter the mode of taking a

channel. Press " \(\rightharpoonrightarrow\)" or press the numeric keyboard to take a

12-2: Long press: manual channel storage: find the target frequency and long press "MEMO", "Present" flashes.

"MEMO" to confirm.

Play & Pause
Play mode switching

to computer with USB cable AUX-in

Press " \$\dip\$" to choose an address of storing a channel. Press

TF card/Bluetooth/3.5mm audio cable input AUX-in/connection

15-1: Choose a frequency on numeric keyboard: press "ENTER"

15-2: Take a channel: press the numeric keyboard to show the

address of storing a channel and press "ENTER" to confirm.

17-1: In the mode of FM, AM, SW, VHF or AIR, long press

17-2: In the mode of WB, long press "SCAN" to enter the mode

first, choose the target frequency on numeric keyboard, and press

15-3: In the mode of TF card, press the numeric keyboard to show

"SCAN" to enter the mode of automatically searching and storing

Lightly press the key to switch between play modes


"ENTER" to directly show the frequency you need.


the song number and press "ENTER" to confirm.


"Present--" means no channel is taken.

In the mode of SW, choose METE.

of alarm and long press it again to exit.

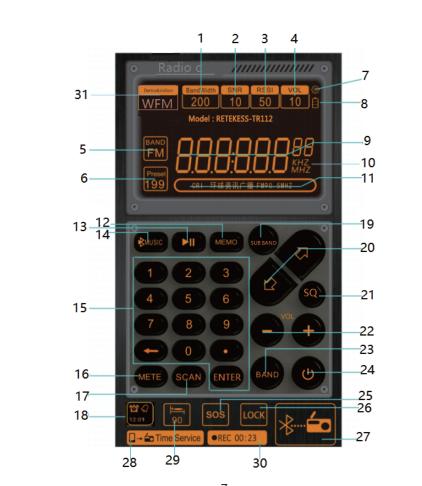

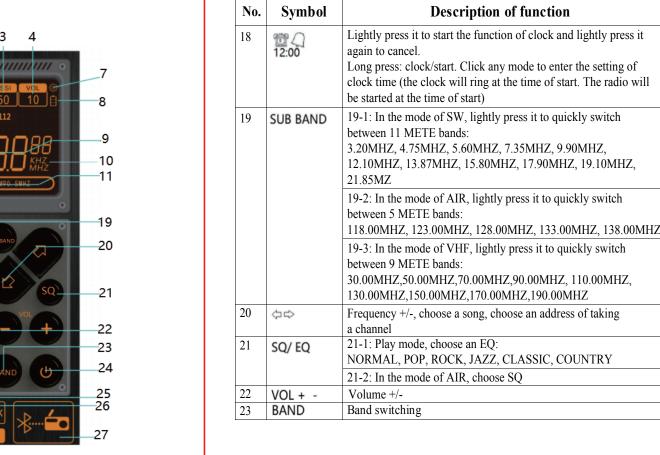

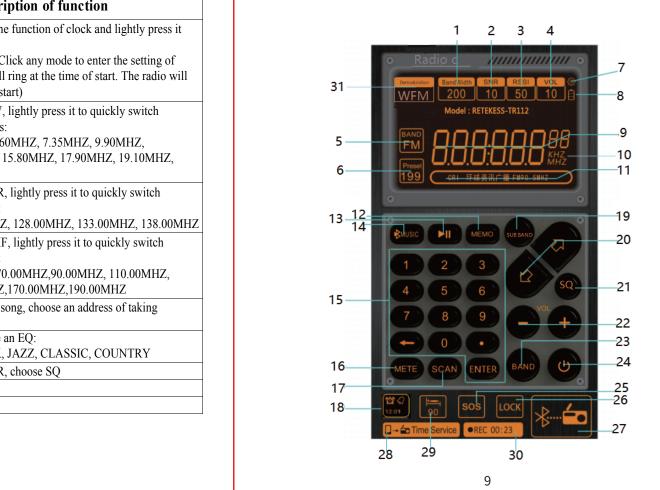

No.	Symbol	Description of function
24	ds	24-1: Power
	Θ	24-2: After turning off the radio on APP interface, the
		the state of time. Long press " BLE Disconnec
2.5		which means APP is disconnected.
25	SOS	25-1: Long press it to start SOS alarm and lightly press
		25-2: Long press it to start the flashlight and lightly proff it.
26	LOCK	Long press it to lock and long press it again to unlock
27	⊹←	Press it to connect your mobile APP to TR
28	☐— Time Service	Time calibration (press it to calibrate the time on the r
29		Lightly press it to set the sleep time.
30	REC	Record in the mode of reception.
		Before recording, insert the TF card to the radio first,
		press it to enter the mode of recording, and lightly pre
		to exit recording (play using the TF card after recording
31	Demodulation	Mode of demodulation

Description of function	Appendix 3: Working modes	
-1: Power	on APP interface	
2: After turning off the radio on APP interface, the radio shows		
tate of time. Long press " E", "BLE Disconnected" appears,	Sound effect Choose the play mode of TF card Connection to computer Audio connection with 3.5MM	
ch means APP is disconnected.	Reception mode Play mode of Bluetooth Play mode of TF card Sound effect Audio input Play mode Sound audio cable	
: Long press it to start SOS alarm and lightly press it to cancel it.	VOL.11 (200) VOL.1	
2: Long press it to start the flashlight and lightly press it to turn		
it.	M DI JULIU DO DESCRIPTION DE POSSIBLE POLICIO	
g press it to lock and long press it again to unlock.		
ess it to connect your mobile APP to TR112 radio.	Instruction 1: Click " " on your mobile to choose a play mode and choose EQ:	
ne calibration (press it to calibrate the time on the radio)	NORMAL, POP, ROCK, JAZZ, CLASSIC, COUNTRY	
,	Instruction 2: In the play mode of TF card, click " "" to choose the play sequence.	
tly press it to set the sleep time.		
cord in the mode of reception.	(Repeat all, "rA" appears)	
fore recording, insert the TF card to the radio first, lightly	(Repeat one, "rO"	
ss it to enter the mode of recording, and lightly press it again	(Repeat the songs in current folder, "rF" appears)	
xit recording (play using the TF card after recording).	(Shuffle, "rr" appears)	
ode of demodulation		