

# TR607 User Manual Size : 260 x 86mm Double sided printing



### DESCRIPTION OF PARTS

- Short press : Previous song
- Short press : Next song
- ON/OFF ( Clockwise ) Counter Clockwis : Volume decrease Clockwise : Volume increase
- Mode(s) Switch: Wireless / FM / USB / Micro SD(TF) Card
- Short Press: Pause / Play / Hands free Call
- FM Adjustment
- MIC
- Charging port
- Micro SD (TF) Card Slot
- AUX Input
- USB Flash Drive Slot
- FM Antenna

### INSTRUCTIONS FOR USE

#### Charging the Speaker

The speaker has built-in rechargeable battery. When the battery is drained out, speaker would turn off automatically. Please recharge the battery, as the Operation method:

Plug the Micro USB end of the included USB rechargeable cable into the charging port. Plug the other end into a USB port on your computer or other devices made for USB charging. Red LED Light illuminates indicating that the device is being charged. It needs 3-5 hours to complete charging. Once the speaker is fully charged, LED Light would turn OFF.

### IMPORTANT REMINDERS

- Please do not disassemble, repair or transform the product
- This product use Lithium battery, please do not discard or put it in the fire.
- Do not expose this product to rain or humidity, so as to avoid the device.
- Please do not recharge the device repeatedly, or the Lithium battery inside would be aging quickly.
- In the FM Radio mode, please insert the charging line to the charging port, to get better radio signals and better listening experience.

#### Listening to Music Wirelessly

Please ensure that your device (Mobile Phone, Tablet or other devices) is paired with the Wireless Speaker to stream music wirelessly. Once it is paired, the music could be played from your device.

Music Mode	Function	Operation buttons
Playing music	Increase Volume	Clockwise  key
Playing music	Decrease Volume	Counter clockwise  key
Playing music	Pause	Short press  key
Pause	Play	Short press  key
Playing music	Previous track	Short press  key
Playing music	Next track	Short press  key

Note: The above functions can be used in all models, such as Wireless mode, USB Drive Play mode, TF Card Play mode, as well as FM Radio mode. In AUX input mode, you need to control the medias through the media source devices. you need to operate with the source devices for previous / next track.

#### Hand free Calling Function

Please ensure you mobile phone is paired with the wireless speaker

Handsfree Mode	Function	Operation buttons
Incoming Call	Answer incoming call	Short press  key
Incoming Call	Reject incoming call	Long press  key 3 seconds
Incoming Call	End the Call	Short press  key
ON the line	Increase Volume	Clockwise  key
ON the line	Decrease Volume	Counter clockwise  key
Standby mode and connected to a device	Redial last number	Short press  key 2 times

#### Wireless Connection

- Turn on speaker, LED Indicator will be flashing.
- Search \* TR607 \* via Bluetooth function on your devices (cellphone / tablet / laptop, etc), and connect.
- Once the speaker is paired successfully, the LED Indicator will stay on.
- Play music on your devices and enjoy music wirelessly!

#### Stream music from Micro SD (TF) Card or USB Flash Drive

- Clockwise to turn on ON the speaker.
- Insert the Micro SD (TF) Card or USB Drive preloaded with songs, into the Micro SD (TF) Card Slot or USB Card Slot of the speaker correspondingly, and the sound message "Play by USB drive" or "Play by TF card" respectively will be heard. Speaker would automatically start playing songs from the Micro SD(TF) Card or USB Drive.

#### Listening to FM Radio

- Clockwise to turn on ON the speaker.
- Default Mode is FM radio mode (once the speaker is turned on, it's FM radio mode, not Wireless mode), please switch to other modes through pressing the **M** key.
- Insert the Micro USB end of the included USB rechargeable cable into the charging port, and leave the other end of the cable open. USB charge cable work as FM radio antenna.
- Clockwise or Counter clockwise to skip selected stations.
- Clockwise to increase the volume or Counter clockwise to decrease the volume.

Note: Media can be controlled only through the source devices, while playing music in Auxiliary mode.

#### Play Music Through "Auxiliary" Mode

- Clockwise to turn on ON the speaker.
- Insert one end of the Auxiliary cable (included) into the Auxiliary port, and the sound message "AUX Input Mode" will be heard. Plug the other end to the audio device (such as phone / MP3 / Player / computer / tablet .....etc).
- Select your favourite song at the source device to play.
- Clockwise to increase the volume or Counter clockwise to decrease the volume.

Note: Media can be controlled only through the source devices, while playing music in Auxiliary mode.

#### Tips!!

In the mode of Between Wireless Play / FM Radio / AUX In / USB / Micro SD (TF) Card, When the speaker is not in use, turn it OFF in order to save the battery power.

#### Troubleshooting

Problem	Possible Cause	Solution
Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) has a very low volume.	Adjust source volume.
	Low battery or Battery dead	Low battery or Replace battery.
Sound distorted	Low battery or Battery nearly dead	Low battery or Replace battery.
	Source (Tablet, Mobile Phone, Laptop) is turned off.	Turn the source on.
No sound at all	Speaker is turned off.	Turn the speaker on.
	Media paused on source.	Play media from source.
Wireless BT cannot connect	There are short functional obstacles in the product	Restart the speaker
	Product has been connected with other devices	Disable Wireless BT of other source devices and search for Wireless BT again

#### SPECIFICATIONS

Wireless Version / Wireless Distance	4.2 + EDR / up to 10 Metres
Output Power / Horn Type	2 x 5 Watts / 4 Ω 52mm
FM Frequency Range	87-108MHz
Unit Size	L196 x H108 x D90mm
Power Input	DC 5V (1.0 A)
Charging Time	4 hours
Play time	up to 4-5 hours
Built-In Rechargeable Battery	3.7V / 1500mAh
Micro SD (TF) Card/USB Drive	Support up to 32GB
Multiple Functions	High sensitivity FM radio / USB Drive / Wireless Play / Hands-Free Call / TF card / AUX Input

### SAFETY INSTRUCTIONS

- Keep the speaker away from heat sources, direct sunlight, humidity, water and any liquids.
- Do not operate the speaker if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and / or injury to yourself and damage to speaker.
- Do not use the speaker if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not use the speaker with wet hands.
- Do not put objects into any of the openings.
- Keep the speaker free from dust, lint etc.
- Do not use this speaker for anything other than its intended use.
- Keep the speaker out of reach of children.
- This appliance is not a toy.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat place, such as sunshine, fire or the like.

### CARE & MAINTENANCE

Read the following recommendations before using the Wireless Speaker. Following these you will be able to enjoy the product for many years.

- Do not expose the unit to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Don't use abrasive cleaning solvents to clean the unit.
- Do not expose the unit to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Don't dispose of the unit in fire as it will result in an explosion.
- Don't expose the unit to contact with sharp objects as this will cause scratches and damage.
- Don't let the unit fall down onto the floor. The internal circuit might get damaged.
- Don't attempt to disassemble the unit as it may get damaged if you are not professional.

RoHS FC CE

### RF ENERGY EXPOSURE AND PRODUCT SAFETY GUIDE

Before using this radio, read this guide which contains important operating instructions for safe usage and RF energy awareness and control for compliance with applicable standards and regulations.

#### Local Government Regulations

When radios are used as a consequence of employment, the Local Government Regulations requires users to be fully aware of and able to control their exposure to meet occupational requirements. Exposure awareness can be facilitated by the use of a product label directing users to specific user awareness information. Your Reteless radio has a RF Exposure Product Label. Also, your Reteless user manual, or separate safety booklet includes information and operating instructions required to control your RF exposure and to satisfy compliance requirements.

#### Unauthorized modification and adjustment

Changes or modifications not expressly approved by the party responsible for compliance may void the user's authority granted by the local government radio management departments to operate this radio and should not be made. To comply with the corresponding requirements, transmitter adjustments should be made only by or under the supervision of a person certified as technically qualified to perform transmitter maintenance and repairs in the private land mobile and fixed services as certified by an organization representative of the user of those services. Replacement of any transmitter component (crystal, semiconductor, etc.) not authorized by the local government radio management departments equipment authorization for this radio could violate the rules.

#### FCC Requirements:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
 (1) This device may not cause harmful interference, and  
 (2) this device must accept any interference received, including interference that may cause undesired operation.

\*This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.  
 This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
 -Reorient or relocate the receiving antenna.  
 -Increase the separation between the equipment and receiver.  
 -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
 -Consult the dealer or an experienced radio/TV technician for help.

CE Requirements:  
 \*Simple EU declaration of conformity) Henan Eshow Electronic Commerce Co.,Ltd declares that the radio

equipment type is in compliance with the essential requirements and other relevant provisions of RED Directive 2014/53/EU and the RoHS Directive 2011/65/EU and the WEEE Directive 2012/19/EU; the full text of the EU declaration of conformity is available at the following internet address: [www.reteless.com](http://www.reteless.com).

-Disposal  
 The crossed-out wheeled-bin symbol on your product, literature, or packaging reminds you that in the European Union, all electrical and electronic products, batteries, and accumulators (rechargeable batteries) must be taken to designated collection locations at the end of their working life. Do not dispose of these products as unsorted municipal waste. Dispose of them according to the laws in your area.

#### IC Requirements:

Licence-exempt radio apparatus  
 This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:  
 (1) This device may not cause interference.  
 (2) This device must accept any interference, including interference that may cause undesired operation of the device.  
 Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :  
 (1) L'appareil ne doit pas produire de brouillage;  
 (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

#### RF Warning Statements

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

#### RF Exposure Information

-DO NOT operate the radio without a proper antenna attached, as this may damage the radio and may also cause you to exceed RF exposure limits. A proper antenna is the antenna supplied with this radio by the manufacturer or an antenna specifically authorized by the manufacturer for use with this radio, and the antenna gain shall not exceed the specified gain by the manufacturer declared.  
 \*To avoid interference, turn off the radio in areas where signs are posted to do so.  
 -DO NOT operate the transmitter in areas that are sensitive to electromagnetic radiation such as hospitals, aircraft, and blasting sites.

#### Avoid Choking Hazard

Small Parts. Not for children under 3 years.

- Use the lowest volume necessary to do your job.
- Turn up the volume only if you are in noisy surroundings.
- Turn down the volume before adding headset or earpiece.
- Limit the amount of time you use headsets or earpieces at high volume.
- When using the radio without a headset or earpiece, do not place the radio's speaker directly against your ear.
- Use careful with the earphone maybe possible excessive sound pressure from earphones and headphones can cause hearing loss.

Note: Exposure to loud noises from any source for extended periods of time may temporarily or permanently affect your hearing. The louder the radio's volume, the less time is required before your hearing could be affected. Hearing damage from loud noise is sometimes undetectable at first and can have a cumulative effect.

#### Approved Accessories

This radio meets the RF exposure guidelines when used with the Reteless accessories supplied or designated for the product. Use of other accessories may not ensure compliance with the RF exposure guidelines and may violate regulations.  
 \*For a list of Reteless-approved accessories for your radio model, visit the following website: <http://www.Reteless.com>

Approved Accessories

### Warranty Card

Product model: \_\_\_\_\_ Date of purchase: \_\_\_\_\_  
 Serial Number: \_\_\_\_\_  
 Seller: \_\_\_\_\_ contact number: \_\_\_\_\_  
 Username: \_\_\_\_\_ contact number: \_\_\_\_\_  
 Address: \_\_\_\_\_ Zip code: \_\_\_\_\_

#### Warranty description:

- The warranty card is saved by the customer as the warranty certificate, and the loss is not compensated.
- This card must be stamped and dated for sale to take effect.
- This card must not be altered. Please confirm that the warranty card serial number matches the purchase machine number, otherwise it will be invalid.
- The warranty period is one year. Chargers, batteries, headphones, antennas and feeders are consumables, not covered by warranty.
- Users can choose the following ways to get repair service:
  - At the original purchase office.
  - Our company is in the local special maintenance point.

CE FC RoHS

Henan Eshow Electronic Commerce Co., Ltd  
 Add: 7/F, Sanjiang Building, No. 170 Nanyang Road, Huiji District, Zhengzhou, Henan, China  
 E: Importer:Gama by Reteless Technology GmbH  
 Add:ress: e-trader29, 38176 endebu rg  
 Facebook: facebook.com/retelless.ru  
 E-mail: support@reteless.com.ru  
 Web: reteless.com.ru