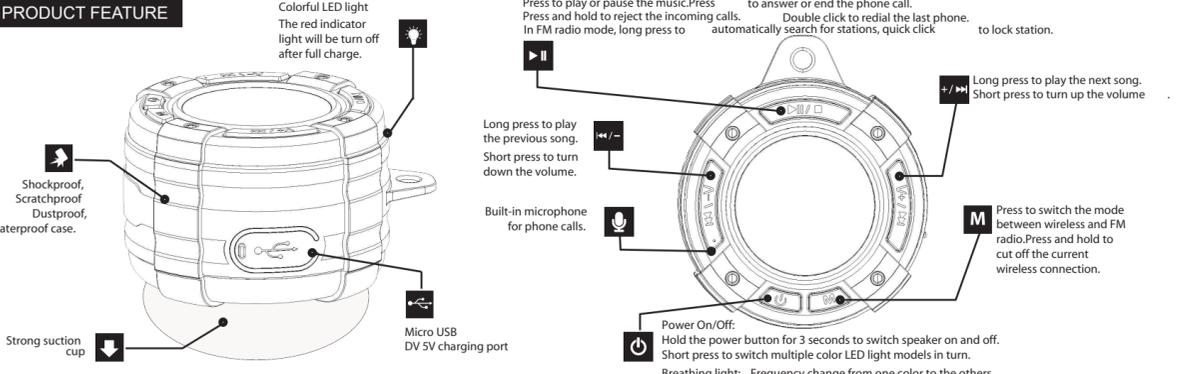


折页, 白底黑字, 正反印刷, 铜版纸 (不过膜)

<p>RETEKESS</p> <p>TR622 FASHION WATERPROOF WIRELESS SPEAKER</p> <p>Quick Start Guide & User Manual</p>	<p>SPECIFICATIONS</p> <ul style="list-style-type: none"> Frequency Range: 100Hz-22KHz Operating Distance: Up to 33 ft Power Rating: 5W Microphone: Built-in SNR: ≥85+2 dB Charging Voltage: DC 5V Battery Capacity: 730mAh Charge Time: Approx. 2 hours Playback Time: Approx. 6 hours(Around 50% Sound Level) Housing Material: ABS+Silicone 	<p>WIRELESS PAIRING</p> <p>Please charge the speaker for 3 hours before using it for the first time.</p> <ol style="list-style-type: none"> Make sure the power is off, place the mobile phone or media player device next to it. Press and hold the power button for 3 seconds to pair.If Bluetooth is not connected within 10 minutes, the product will shut down automatically. Activate the wireless feature on the media player device and search for "Retekess TR622" from the list for pairing. Enter "0000" if the media device prompts for a password. If the connection fails, please refer to the user manual of media player device for wireless setup. Remove all the excessive unused models from the list of paired devices and start over from step 1 again. 	<p>RECHARGING THE DEVICE</p> <p>The wireless speaker is powered by a built-in rechargeable lithium battery that can be operated by the following steps.</p> <ol style="list-style-type: none"> Release the DC 5V charging port cover. Connect the USB charging cable to a standard USB charging port such as computer or USB charger from the DC 5V socket on TR622. <p>PACKAGE CONTENTS</p> <ul style="list-style-type: none"> TR622 Waterproof Speaker USB Charging Cable(Type C) Dedicated Suction Cup Carabiner User Manual 	<p>Changes or modifications not expressly approved by the party responsible for compliance may void the user's authority granted by the local government radio management departments to operate this radio and should not be made. To comply with the corresponding requirements, transmitter adjustments should be made only by or under the supervision of a person certified as technically qualified to perform transmitter maintenance and repairs in the private land mobile and fixed services as certified by an organization representative of the user of those services.</p> <p>Replacement of any transmitter component (crystal, semiconductor, etc.) not authorized by the local government radio management departments authorization for this radio could violate the rules.</p> <p>FCC Requirements:</p> <ul style="list-style-type: none"> This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired 	<p>-- Consult the dealer or an experienced radio/TV technician for help</p> <p>CE Requirements:</p> <ul style="list-style-type: none"> (Simple EU declaration of conformity) Henan Eshow Electronic Commerce Co.,Ltd declares that the radio equipment type is in compliance with the essential requirements and other relevant provisions of RED Directive 2014/53/EU and the ROHS Directive 2011/65/EU and the WEEE Directive 2012/19/EU; the full text of the EU declaration of conformity is available at the following internet address: www.retekess.com. Disposal <p>The crossed-out wheeled-bin symbol on your product, literature, or packaging reminds you that in the European Union, all electrical and electronic products, batteries, and accumulators (rechargeable batteries) must be taken to designated collection locations at the end of their working life. Do not dispose of these products as unsorted municipal waste. Dispose of them according to the laws in your area.</p>
 <p>CE FCC RoHS</p> <p>Henan Eshow Electronic Commerce Co., Ltd Add: 7/F, Sanjiang Building, No.170 Nanyang Road, Huji District, Zhengzhou, Henan, China Facebook: facebook.com/Retekess.ru E-mail: support@rettekess.com.ru Web: rettekess.com.ru</p> 	<p>KEY FUNCTION</p> <ol style="list-style-type: none"> Hold the power button for 3 seconds to switch speaker on and off. Short press to switch multiple color LED light in turn. <ul style="list-style-type: none"> Breathing light: Gradually change from one color to the others. Lock only one color (From Dark Blue, White, Red, Green, Yellow, Purple to Light Blue). Beat-driven light show. Seven colors change rapidly. No light. Press and hold to previous song.Short press to turn down the volume. Press and hold to next song.Short press to turn up the volume. Press to play or pause the music. Press to answer or end the phone call. Press and hold to reject the incoming calls. 	<ol style="list-style-type: none"> Double click to redial the last phone. In FM radio mode, long press to automatically search for stations,quick click to lock station, long press "+" "-" to the station you want to play. <p>M</p> <ol style="list-style-type: none"> Press to switch the mode between wireless and FM radio. Press and hold to cut off the current wireless connection. <p>MAIN FEATURE</p> <ul style="list-style-type: none"> Wireless 5.0 Waterproof Grade: IP67 Controllable Multiple Color LED Light Strong Suction Cup Hands-free Talk Charging by USB FM Radio 	<p>RF ENERGY EXPOSURE AND PRODUCT SAFETY GUIDE</p> <p>ATTENTION: Before using this radio, read this guide which contains important operating instructions for safe usage and RF energy awareness and control for compliance with applicable standards and regulations.</p> <p>Local Government Regulations</p> <p>When radios are used as a consequence of employment, the Local Government Regulations requires users to be fully aware of and able to control their exposure to meet occupational requirements. Exposure awareness can be facilitated by the use of a product label directing users to specific user awareness information. Your Reteckess radio has a RF Exposure Product Label. Also, your Reteckess user manual, or separate safety booklet includes information and operating instructions required to control your RF exposure and to satisfy compliance requirements.</p> <p>Unauthorized modification and adjustment</p>	<p>operation.</p> <ul style="list-style-type: none"> This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: <ul style="list-style-type: none"> Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. 	<p>IC Requirements:</p> <p>Licence-exempt radio apparatus</p> <p>This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:</p> <ol style="list-style-type: none"> This device may not cause interference. This device must accept any interference, including interference that may cause undesired operation of the device. <p>Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :</p> <ol style="list-style-type: none"> l'appareil ne doit pas produire de brouillage; l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement. <p>RF Warning Statements</p> <p>The device has been evaluated to meet general RF</p>

<p>exposure requirement. The device can be used in portable exposure condition without restriction.</p> <p>RF Exposure Information</p> <ul style="list-style-type: none"> DO NOT operate the radio without a proper antenna attached, as this may damage the radio and may also cause you to exceed RF exposure limits. A proper antenna is the antenna supplied with this radio by the manufacturer or an antenna specifically authorized by the manufacturer for use with this radio, and the antenna gain shall not exceed the specified gain by the manufacturer declared. To avoid interference, turn off the radio in areas where signs are posted to do so. DO NOT operate the transmitter in areas that are sensitive to electromagnetic radiation such as hospitals, aircraft, and blasting sites. <p>Avoid Choking Hazard</p> <p>Small Parts. Not for children under 3 years. Protect your hearing:</p>	<p>volume, the less time is required before your hearing could be affected. Hearing damage from loud noise is sometimes undetectable at first and can have a cumulative effect.</p> <p>Approved Accessories</p> <ul style="list-style-type: none"> This radio meets the RF exposure guidelines when used with the Reteckess accessories supplied or designated for the product. Use of other accessories may not ensure compliance with the RF exposure guidelines and may violate regulations. For a list of Reteckess-approved accessories for your radio model, visit the following website: http://www.Retekess.com <p>EU Importer Name Germany Retevis Technology GmbH Address Uetzenacker 29,38176 wendeburg</p>	<p>PRODUCT FEATURE</p>  <p>Colorful LED light The red indicator light will be turn off after full charge.</p> <p>Shockproof, Scratchproof, Dustproof, Waterproof case.</p> <p>Strong suction cup</p> <p>Micro USB DV 5V charging port</p> <p>Built-in microphone for phone calls.</p> <p>Power On/Off: Hold the power button for 3 seconds to switch speaker on and off. Short press to switch multiple color LED light models in turn.</p> <p>Breathing light: Frequency change from one,color to the others. Lock only one color. Beat-driven light show. Seven colors change rapidly. No light.</p> <p>Press to play or pause the music.Press to answer or end the phone call. Press and hold to reject the incoming calls. Double click to redial the last phone. In FM radio mode, long press to automatically search for stations, quick click to lock station.</p> <p>Long press to play the next song. Short press to turn up the volume.</p> <p>Press to switch the mode between wireless and FM radio.Press and hold to cut off the current wireless connection.</p>	<p>Warranty Card</p> <p>Product model: _____ Date of purchase: _____</p> <p>Serial Number: _____</p> <p>Seller: _____ contact number: _____</p> <p>Username: _____ contact number: _____</p> <p>Address: _____</p> <p>Zip code: _____</p> <p>Remarks:</p> <ol style="list-style-type: none"> This guarantee card should be kept by the user, no replacement if lost. Most new products carry a two-year manufacturer's warranty from the date of purchase. The user can get warranty and after-sales service as below: <ul style="list-style-type: none"> Contact the seller where you buy. Products Repaired by Our Local Repair Center For warranty service, you will need to provide a receipt proof of purchase from the actual seller for verification <p>Exclusions from Warranty Coverage:</p> <ol style="list-style-type: none"> To any product damaged by accident. In the event of misuse or abuse of the product or as a result of unauthorized alterations or repairs. If the serial number has been altered, defaced, or removed.
--	--	--	---

<ul style="list-style-type: none"> Use the lowest volume necessary to do your job. Turn up the volume only if you are in noisy surroundings. Turn down the volume before adding headset orearpiece. Limit the amount of time you use headsets or earpieces at high volume. When using the radio without a headset or earpiece, do not place the radio's speaker directly against your ear Use careful with the earphone maybe possible excessive sound pressure from earphones and headphones can cause hearing loss <p>Note: Exposure to loud noises from any source for extended periods of time may temporarily or permanently affect your hearing. The louder the radio's</p>	<p>TROUBLE SHOOTING</p> <table border="1"> <thead> <tr> <th>Symptoms</th> <th>Causes</th> <th>Solutions</th> </tr> </thead> <tbody> <tr> <td>TR622 Can't be powered on</td> <td>The battery is too low</td> <td>Recharge the speaker </td> </tr> <tr> <td>Can't to pair with the speaker</td> <td>TR622 already paired or not in pairing mode</td> <td>Refer to "Wireless Pairing Section" on the previous page</td> </tr> <tr> <td>Volume too low</td> <td>Low battery or the volume on TR622 and media player are not set to maximum</td> <td>Increase the volume of TR622 and media player</td> </tr> <tr> <td>FM Radio Signals</td> <td>1. To receive optional FM radio signal, relocate TR622 to open environment. Remove it from a closed loop area or other electronic devices to reduce interference. 2. If applicable, inserting the antenna may enhance signal.</td> <td></td> </tr> </tbody> </table> <p>SAFTY INSTRUCTIONS</p> <ol style="list-style-type: none"> Please make sure the plug cover is tight before drop into the water. Keep the product away from extreme weather to protect the unit against electric shock, explosion or body injury. 	Symptoms	Causes	Solutions	TR622 Can't be powered on	The battery is too low	Recharge the speaker 	Can't to pair with the speaker	TR622 already paired or not in pairing mode	Refer to "Wireless Pairing Section" on the previous page	Volume too low	Low battery or the volume on TR622 and media player are not set to maximum	Increase the volume of TR622 and media player	FM Radio Signals	1. To receive optional FM radio signal, relocate TR622 to open environment. Remove it from a closed loop area or other electronic devices to reduce interference. 2. If applicable, inserting the antenna may enhance signal.		<ol style="list-style-type: none"> Do not use the product in an overheated place, such as a stove or an open flame. Keep the product out of the reach of children. Do not turn the volume too high to avoid hearing damage. Clean the product with soft cloth and do not use harsh corrosive chemicals.Always unplug from the power source before cleaning. Do not puncture or disassemble the exterior surface of the product in any way. Do not insert any metal objects into the device to avoid damaging the product. 	<p>Remarks:</p> <ol style="list-style-type: none"> This guarantee card should be kept by the user, no replacement if lost. Most new products carry a two-year manufacturer's warranty from the date of purchase. The user can get warranty and after-sales service as below: <ul style="list-style-type: none"> Contact the seller where you buy. Products Repaired by Our Local Repair Center For warranty service, you will need to provide a receipt proof of purchase from the actual seller for verification <p>Exclusions from Warranty Coverage:</p> <ol style="list-style-type: none"> To any product damaged by accident. In the event of misuse or abuse of the product or as a result of unauthorized alterations or repairs. If the serial number has been altered, defaced, or removed.
Symptoms	Causes	Solutions																
TR622 Can't be powered on	The battery is too low	Recharge the speaker 																
Can't to pair with the speaker	TR622 already paired or not in pairing mode	Refer to "Wireless Pairing Section" on the previous page																
Volume too low	Low battery or the volume on TR622 and media player are not set to maximum	Increase the volume of TR622 and media player																
FM Radio Signals	1. To receive optional FM radio signal, relocate TR622 to open environment. Remove it from a closed loop area or other electronic devices to reduce interference. 2. If applicable, inserting the antenna may enhance signal.																	